

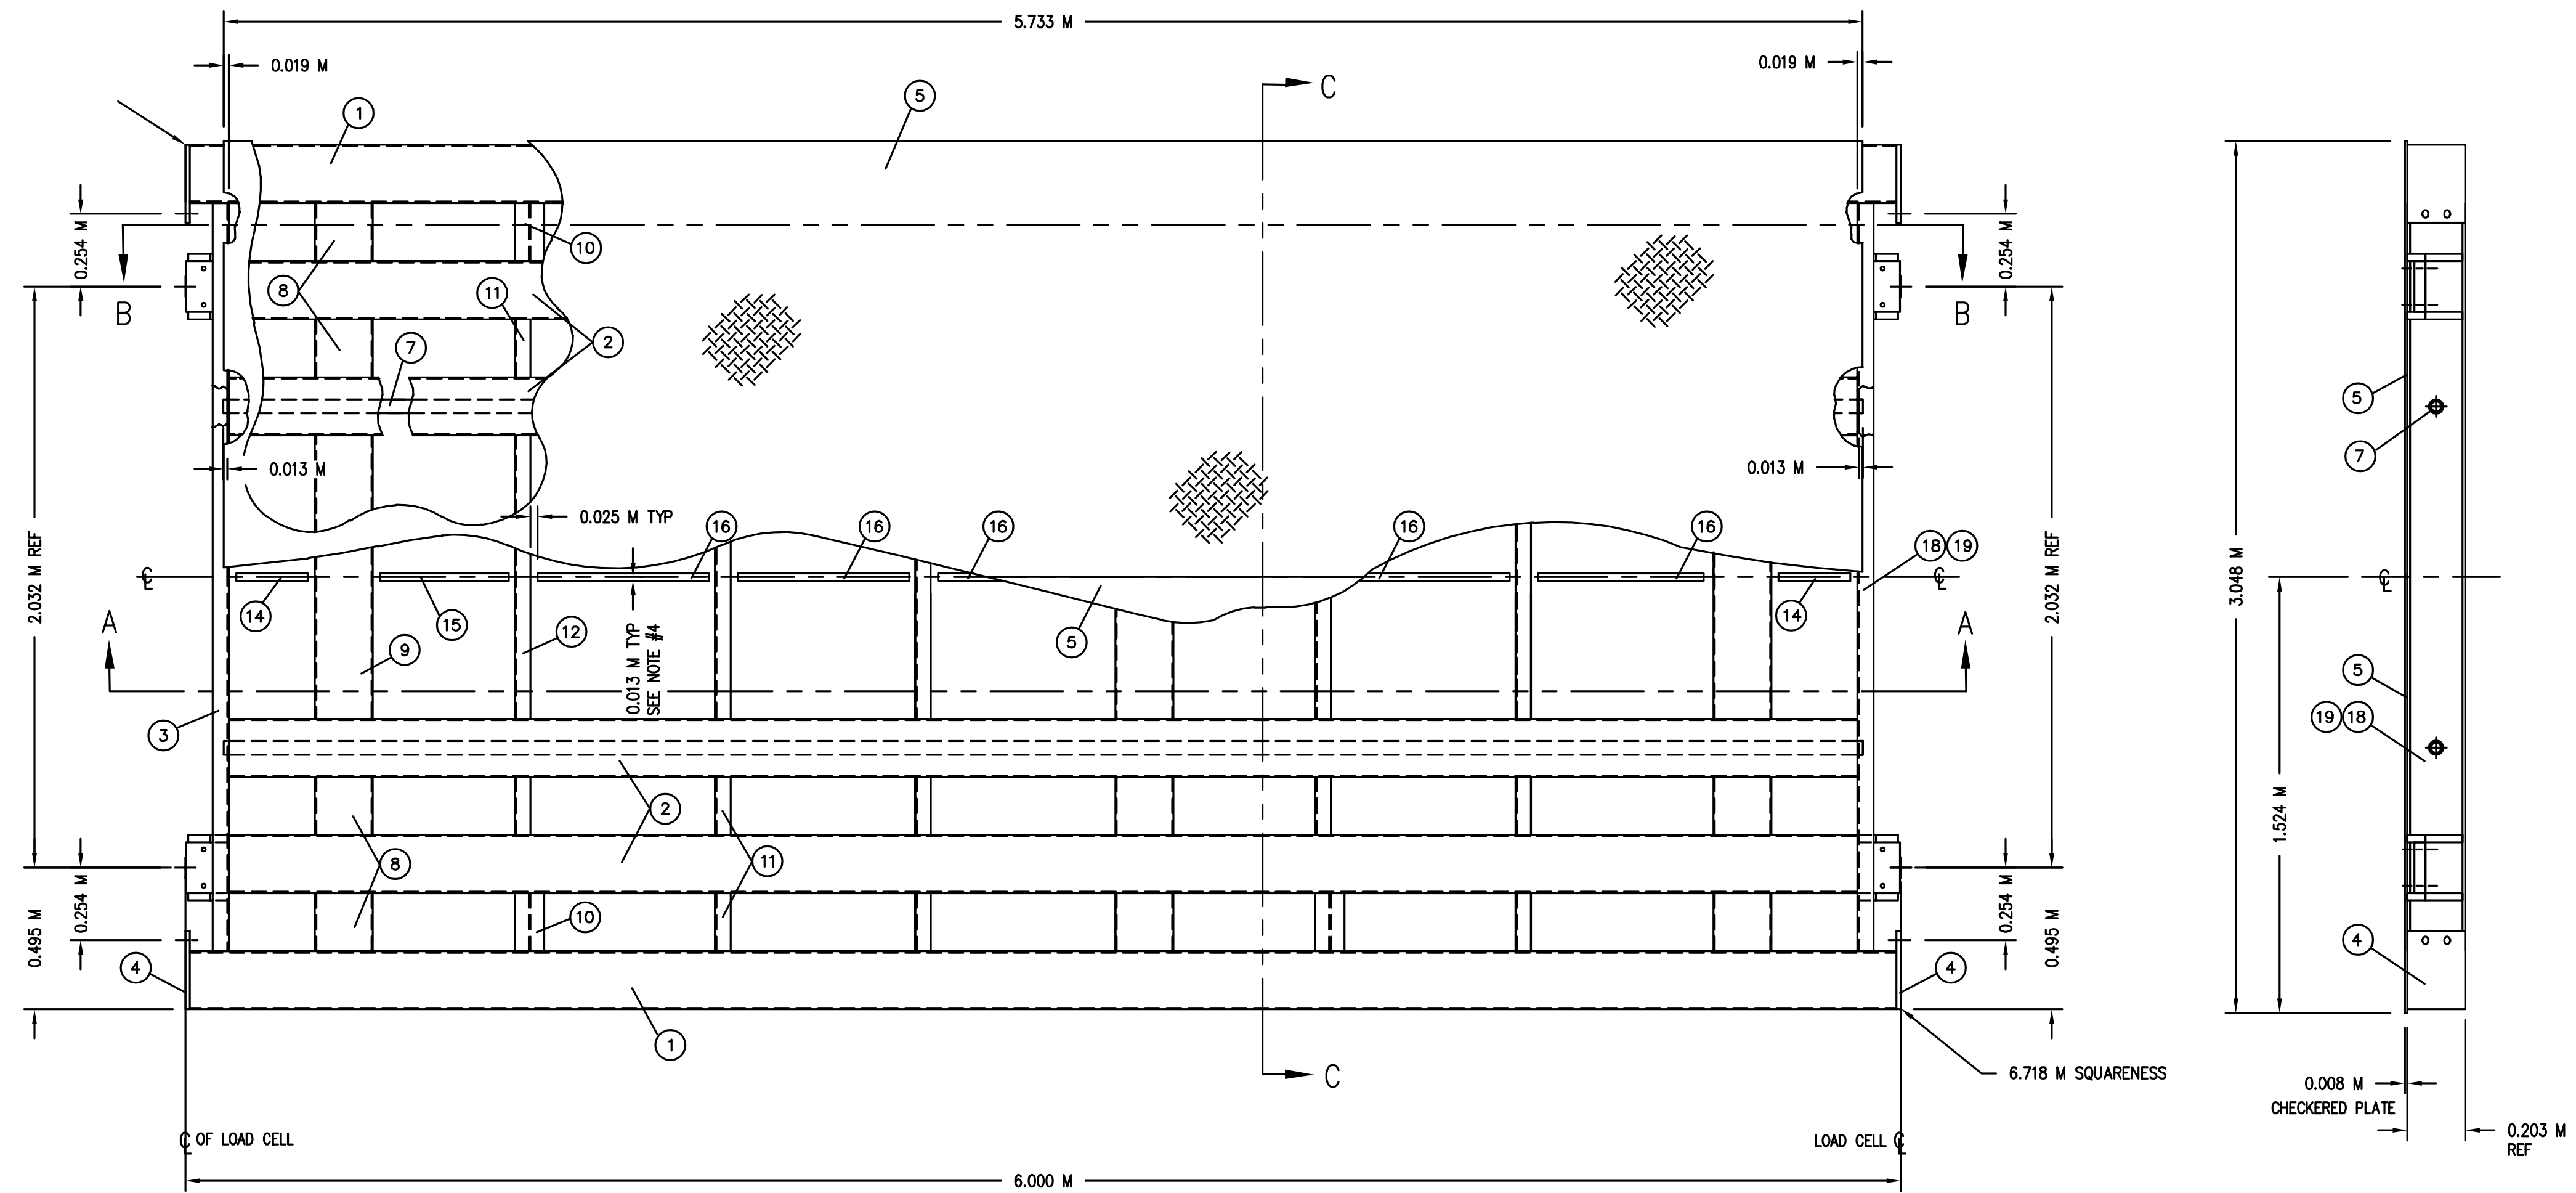
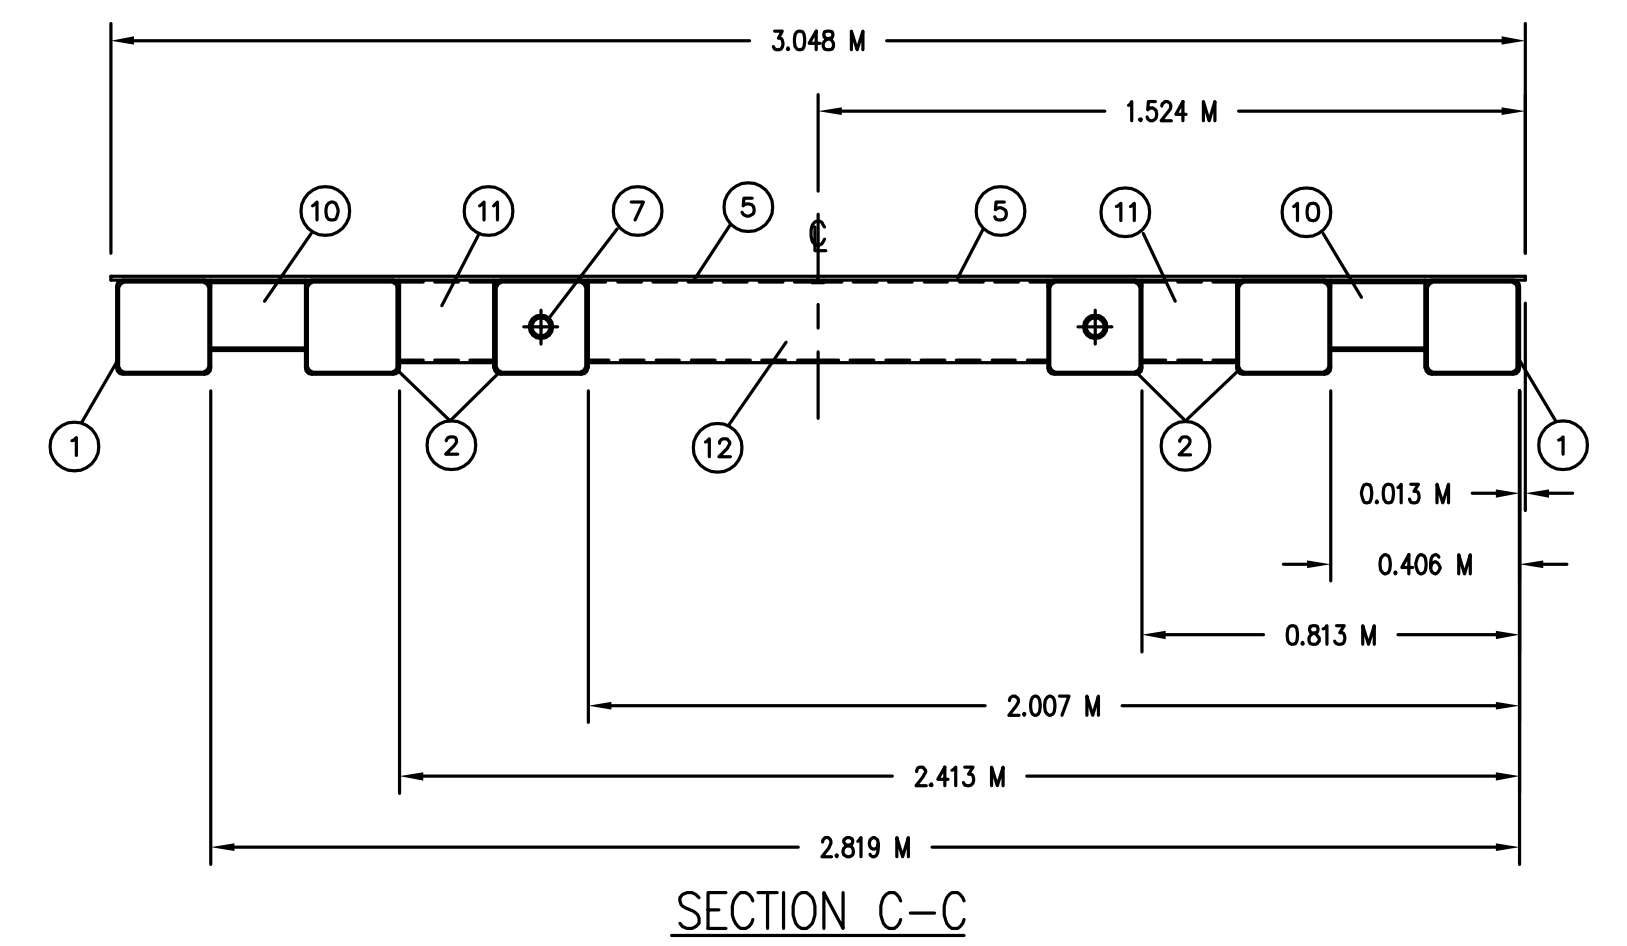


REVISION RECORD			
LTR	DESCRIPTION	DATE	BY
A	RELEASED	10/10/02	JAT

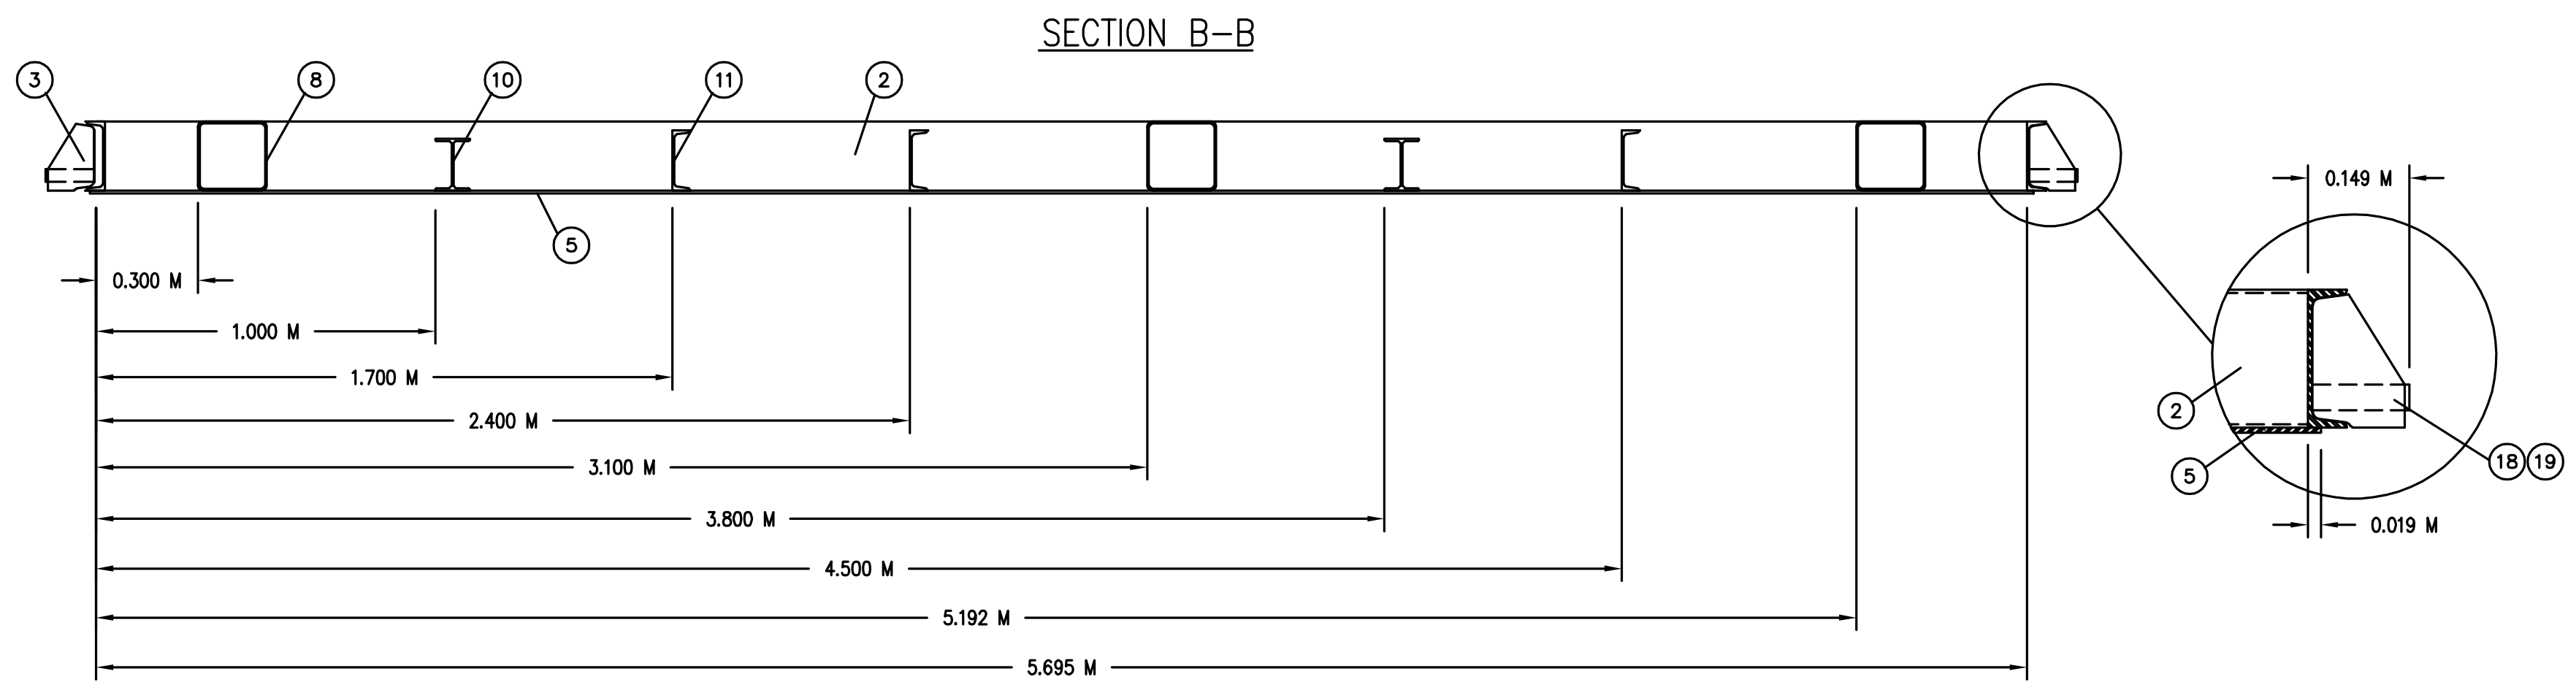

- NOTES:
- USE ITEM 10 FOR LIFTING LUGS.
  - EXTERIOR TUBES SHALL NOT BE SPLICED.
  - INTERIOR TUBES MAY BE SPLICED.
  - ITEMS #14, #15 & #16 ARE TO BE WELDED TO THE UNDER SIDE OF THE CHECKERED DECK PLATE SEAM TO PREVENT WARPING OF THE DECK WHEN WELDING THE SEAM.

QTY.	QTY.	QTY.	ITEM	PART/DWG. NUMBER	DESCRIPTION	MATERIAL OR SOURCE	WT. EACH
1	19		0147-B458-1A	END CHANNEL ASSY			88.2
1	18		0147-B456-1A	END CHANNEL ASSY			88.9
			17				
5	5	16		BAR 0.6 CM X 2.5 CM X 60.0 CM			0.8
2	2	15		BAR 0.6 CM X 2.5 CM X 45.0 CM			0.6
3	3	14		BAR 0.6 CM X 2.5 CM X 25.0 CM			0.3
			13				
5	5	12		C7 X 9.8# X 99.06 CM			4.4
16	16	11		C7 X 9.8# X 20.32 CM			3.0
2	2	10		W6 X 15# X 20.32 CM			4.5
3	3	9		SQUARE TUBING 20.3 CM X 20.3 CM X 0.48 CM X 99.06 CM			28.9
12	12	8		SQUARE TUBING 20.3 CM X 20.3 CM X 0.48 CM X 20.32 CM			5.9
2	2	7		PIPE 3.8 CM SCH 40 X 5.733 M			23.2
			6				
2	2	5		CHECKERED PLATE 0.8 CM X 1.524 M X 5.733 M			588.7
4	4	4	0108-B040-08	CONNECTING PLATE			7.2
1	1	3	0147-B455-1A	END CHANNEL ASSY (PLAIN)			79.5
4	4	2		SQUARE TUBING 20.3 CM X 20.3 CM X 0.48 CM X 5.695 M			165.6
2	2	1		SQUARE TUBING 20.3 CM X 20.3 CM X 0.48 CM X 5.970 M			173.6

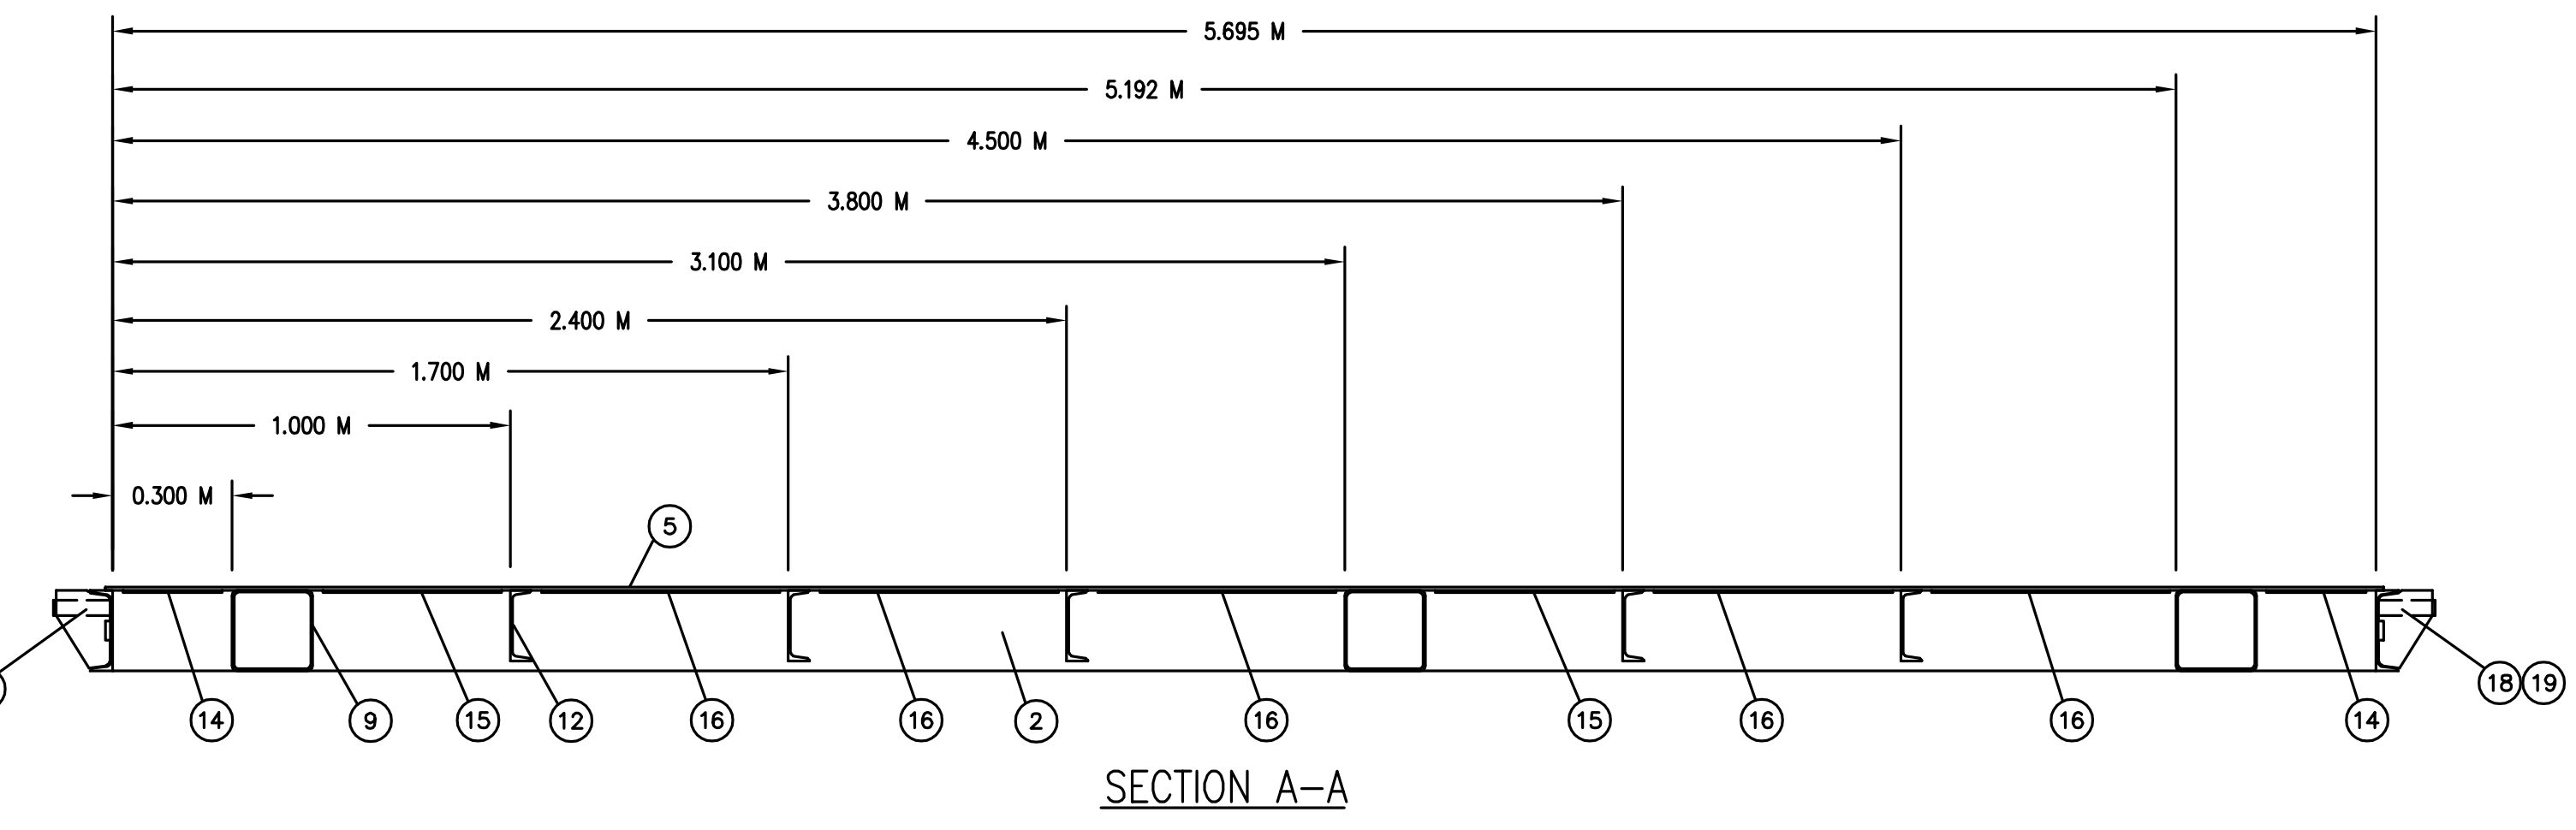

2675 KG 2676 KG WT.

UNLESS OTHERWISE SPECIFIED TOLERANCE ON DIMENSIONS ARE:  
 ANGLES ± 1/2°  
 INTEGERS/FRACTIONS ± 1.5 MM

DR. TARNOWECKY DATE 10/8/02  
 CH. M. L. SMITH DATE 10/8/02

SCALE N.T.S. DO NOT SCALE DRAWING NEXT ASSEMBLY

MODEL PRC-1 METRIC SHEET 1 OF 1 DWG. NO. 0108-D022-0A REV. A

THIS DRAWING IS THE PROPERTY OF THE CARDINAL SCALE MFG. CO. AND SHALL NOT BE USED NOR REPRODUCED EITHER WHOLLY OR IN PART EXCEPT WITH WRITTEN AUTHORIZATION. ALL RIGHTS OF DESIGN OR INVENTION ARE RESERVED.

Cardinal  
 Cardinal Scale Manufacturing Co.  
 WEIGH BRIDGE -- INTERMEDIATE MODULE (6.0 M X 3.048 M)