



LIFT-UP TOP FLOOR HUGGER

**Stainless Steel Low-Profile
Platform Scales**

Ideal for:

- Poultry Industry
- Agri-chemical
- Produce
- Seafood


The lift-up top
makes cleaning
quick and easy



**Cardinal Scale
Introduces the New
Lift-Up Top All-Stainless Steel Floor Huggers.**

These scales are perfect for food and material processing applications when a clean environment is a must. The lift-up top design with stainless steel gas spring shocks allows for easy lifting of the heavy duty deck. This design coupled with their stainless steel construction makes them ideal for wash down and cleaning in sanitary environments.

Lift-up Top Floor Huggers

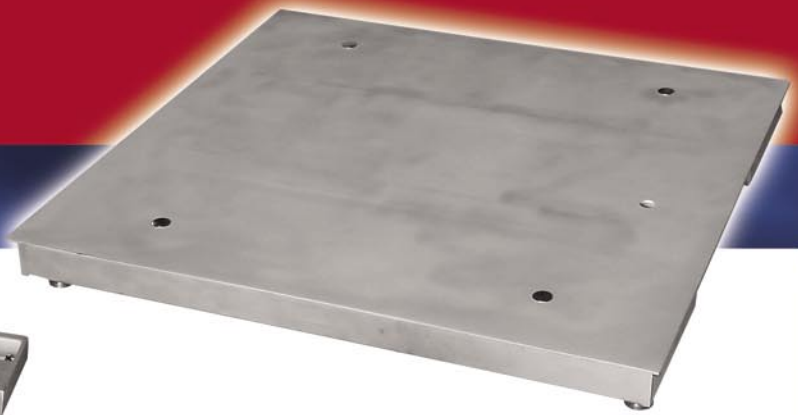

Cardinal's Lift-up Top Floor Huggers are specifically designed to meet the special sanitation requirements in food processing and pharmaceutical plants. The removable scale top provides quick and easy access to the floor below the scale for cleaning and inspection.

To avoid hard-to-clean pockets that can breed bacteria and allow food or chemicals to build up over time, the gas shocks in these Cardinal models allow the platform to easily lift up giving access to the floor for cleaning.

The low-profile design offers ideal and safe loading conditions. Standard or low angle ramps provide easy access for lift trucks, pallet trucks, and carts. These models are built for pit or above-ground use.

FEATURING:

- **All-stainless steel, waterproof SB-2500S and SB-5000S load cells for corrosion resistance.**
- **Lift-up top design with stainless steel gas spring shocks allow for easy lifting of the heavy duty deck.**
- **Remote, stainless steel load cell junction box.**
- **Cardinal's exclusive self-aligning floor scale feet.**
- **Available in smooth or checkered stainless steel deck design.**

Cardinal Lift-Up Top Floor Hugger Models

Model	Capacity	Platform Size
FHLT-544	5,000 lb x 1 lb / 2,268 kg x .5 kg	4' x 4' (1.2 m x 1.2 m)
FHLT-555	5,000 lb x 1 lb / 2,268 kg x .5 kg	5' x 5' (1.5 m x 1.5 m)
FHLT-1044	10,000 lb x 2 lb / 4,536 kg x .9 kg	4' x 4' (1.2 m x 1.2 m)
FHLT-1055	10,000 lb x 2 lb / 4,536 kg x .9 kg	5' x 5' (1.5 m x 1.5 m)

Cardinal Scale reserves the right to improve, enhance or modify features and specifications without prior notice.



 **Cardinal**[®]
 Cardinal Scale Manufacturing Co.
 203 E. Daugherty, Webb City, MO 64870 USA
 Ph: 417-673-4631 or 800-441-4237 • Fax: 417-673-5001
www.cardinalscale.com

Sold By: