



COLOR	FUNCTION
GREEN	+ EXCITATION
BLACK	- EXCITATION
RED	+ SIGNAL
WHITE	- SIGNAL

REVISION RECORD			
LTR	DESCRIPTION	DATE	BY

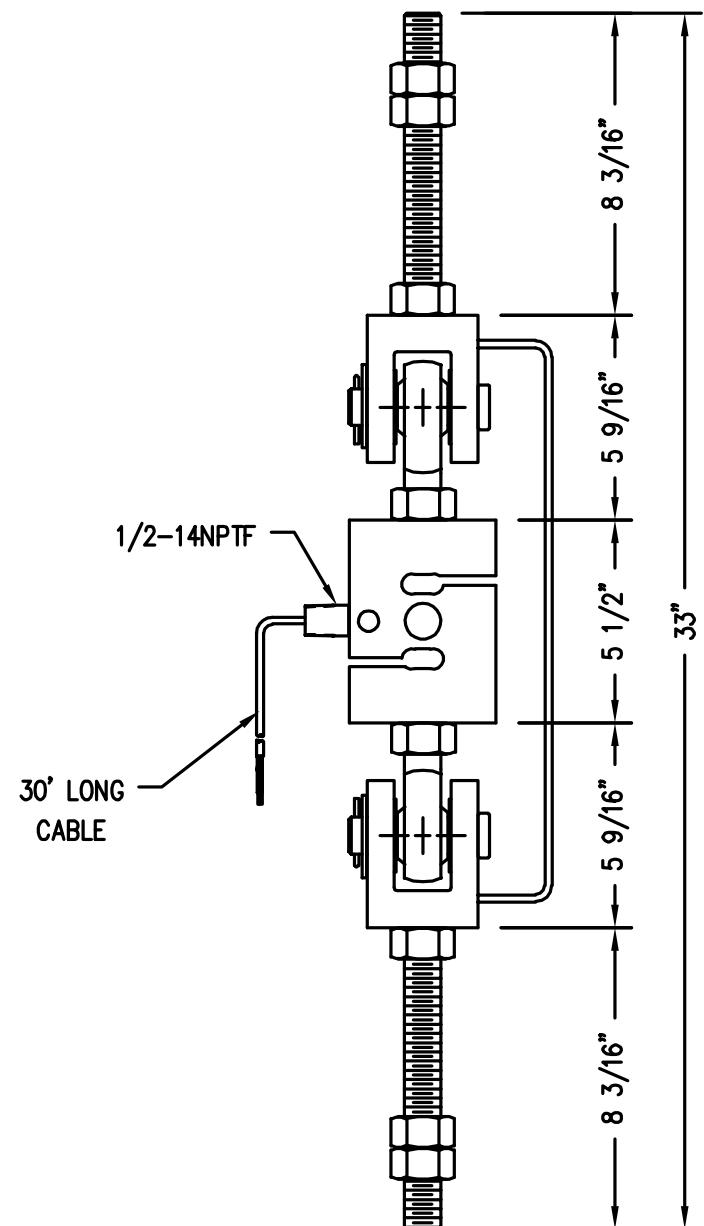

-0A  
ASSEMBLY

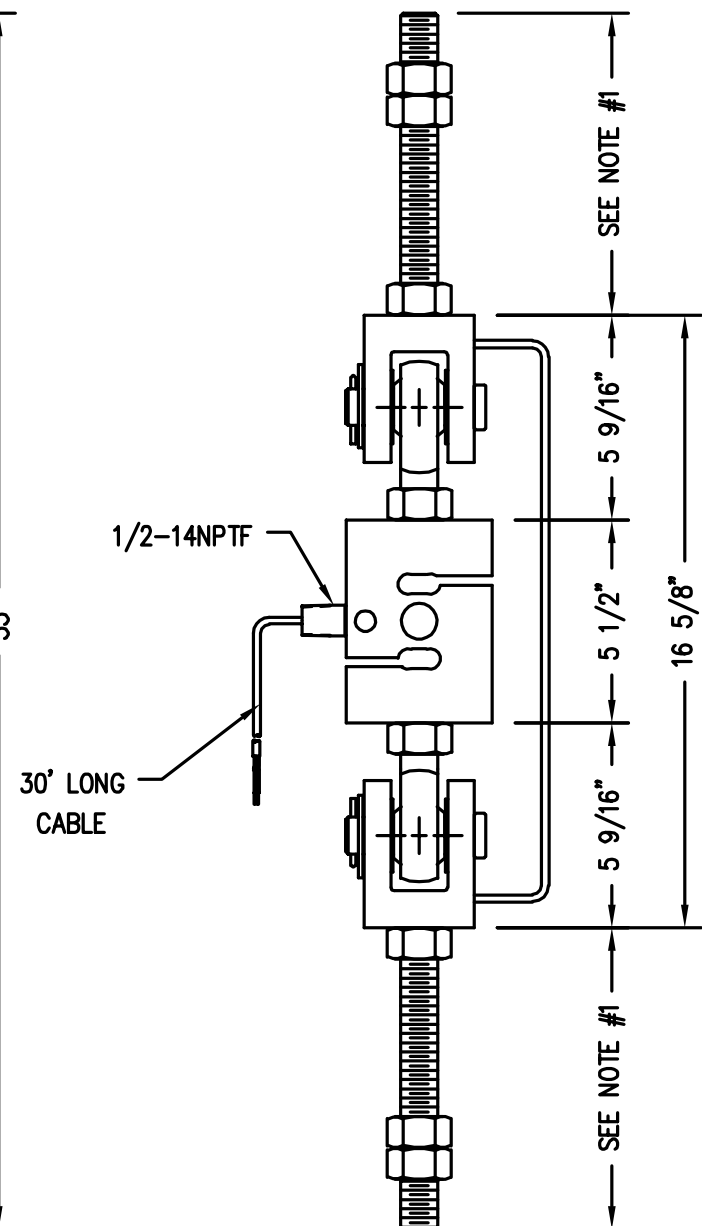

-1A  
ASSEMBLY

**NOTES:**

- 1A ASSEMBLY TO BE USED FOR SPECIALS APPLICATIONS REQUIRING MOUNTING DIMENSIONS OTHER THAN STANDARD. THIS IS FURNISHED WITH STRAIGHT RODS ONLY. THE LENGTH OF THE RODS IS TO BE SPECIFIED ON THE SALES ORDER.
- THE ROD ENDS FURNISHED WITH ALL THE LINKAGES ARE HIGH STRENGTH STEEL ALLOY WITH TFE LINER FOR ELECTRICAL ISOLATION.
- CLEARANCE HOLE FOR 1-8UNC-2A STRAIGHT ROD IS REQUIRED.
- THE PURCHASER OF SUSPENDED SYSTEM SCALES SHOULD ARRANGE FOR SAFETY DEVICES AS RECOMENDED BY THE SCALE MANUFACTURER'S ASSOCIATION INC.
- WHEN ASSEMBLING OR ADJUSTING, THREAD ENGAGEMENT MUST BE EQUAL TO THREAD DIAMETER (MINIMUM).

QTY.	QTY.	QTY.	ITEM	PART/DWG. NUMBER	DESCRIPTION	MATERIAL OR SOURCE	WT. EACH
			ASSY				
			WT.	PARTS/MATERIAL LIST			

UNLESS OTHERWISE SPECIFIED TOLERANCE ON DIMENSIONS ARE:  
 ANGLES ± 1/2°  
 INTEGERS/FRACTIONS ± 1/16 IN.  
 DECIMALS (.X) ± .03 IN.  
 DECIMALS (.XX) ± .01 IN.  
 DECIMALS (.XXX) ± .005 IN.  
 NOTE: WHOLE NUMBERS MUST BE WRITTEN XX.000 TO INVOKE DECIMAL TOLERANCES.

TITLE: TENSION LOAD CELL ASSEMBLY

THIS DRAWING IS THE PROPERTY OF THE CARDINAL SCALE MFG. CO. AND SHALL NOT BE USED NOR REPRODUCED EITHER WHOLLY OR IN PART EXCEPT WITH WRITTEN AUTHORIZATION. ALL RIGHTS OF DESIGN OR INVENTION ARE RESERVED.

SCALE	N.T.S.	DO NOT SCALE DRAWING	NEXT ASSEMBLY	CUSTOMER DRAWING
DR. TARNOWECKY	DATE	5/2/03	[Barcode]	
CH.	DATE		DWG. NO.	REV.
MODEL	SHEET	15,000# CAPACITY	3501-B205-0A	A
	2 OF 2			