




BRIDGE AND
5
YEAR
BELOW WARRANTY

CAN bus connectivity:
Separate fiber optic or
copper wire transceivers.



Intelligent Junction Box

Proactive, Preventive Solutions

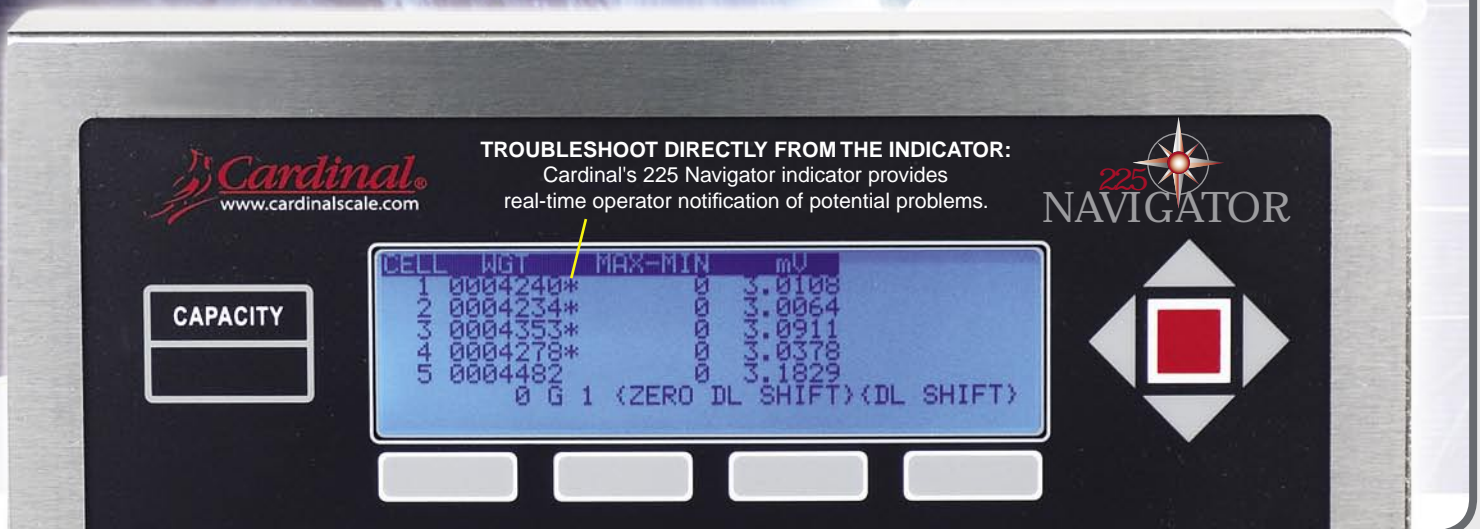

INTELLIGENT JUNCTION BOX

ICAN FEATURES

- **IP66/NEMA 4X stainless steel enclosure** provides rugged, corrosion-proof protection.
- **Real-time load cell diagnostics** identifies load cell problems before they cause inaccurate weighing, so scale downtime is minimized.
- **Troubleshoot directly from the indicator** with Cardinal's model 225 indicator, providing real-time operator notification of potential problems, including zero drift, instability, and load cell failure.
- **On-board diagnostic displays** (7-segment display with 14 LEDs) in the iCan provide load cell and diagnostic data right in the junction box, displaying current values where your scale technician is working.
- **Cardinal's patented SmartCal®** allows quick calibration with no manual adjustments, so there is less handling of test weights which saves time and money. Trim and calibrate scales in one pass.
- **The CAN bus multi-drop interface overcomes the limitations of daisy-chaining** where if you lose one connection, you lose them all. The iCan system can handle up to 32 load cells divided among up to 3 scales.
- **Ethernet interface** from Cardinal's 225 indicator allows networking capabilities.
- **Transient noise isolation** by fiber optic connection between the indicator and junction box.

PLASTIC FIBER OPTIC CABLE Indicator and j-box sold separately. Indicator to iCan j-box up to 300 feet. *Indicator includes CAN card.	MODEL	DESCRIPTION
	225 ICANP	225 Indicator for ICANP*
	ICAN4P	4 load cell iCan j-box
	ICAN6P	6 load cell iCan j-box
	ICAN8P	8 load cell iCan j-box
	ICAN10P	10 load cell iCan j-box
	ICAN12P	12 load cell iCan j-box
	ICAN14P	14 load cell iCan j-box

GLASS FIBER OPTIC CABLE Indicator and j-box sold separately. Indicator to iCan j-box up to 5,000 feet. *Indicator includes CAN card.	MODEL	DESCRIPTION
	225 ICANG	225 Indicator for ICANG*
	ICAN4G	4 load cell iCan j-box
	ICAN6G	6 load cell iCan j-box
	ICAN8G	8 load cell iCan j-box
	ICAN10G	10 load cell iCan j-box
	ICAN12G	12 load cell iCan j-box
	ICAN14G	14 load cell iCan j-box

ICAN SPECIFICATIONS

Power Requirements	115 to 230 VAC 50/60 Hz at 1 ampere per junction box
Temperature Range (Compensated)	-13 to 104 °F (-25 to +40 °C)
Junction Box Connections	2 AC Power, 8 load cell inputs, 2 fiber optic or copper wire
Junction Box Dimensions	17" W x 9 1/2" D x 3 3/8" H (432mm x 241mm x 88mm)
Sample Rate	1 to 50 samples per second, selectable
Load Cells	Up to eight 350-ohm strain gauge load cells per box
Load Cell / Scale Capacity	Thirty-two 350-ohm load cells among up to 3 scales (8 load cells per box, maximum of four boxes)
Excitation Voltage	12 VDC
Sensitivity:	NON-COMMERCIAL 0.15 uV/e NTEP 0.3 uV/e (Class III/IIIL) CANADA 0.3 uV/e (Class III/IIILD) OIML 1.2 uV/e (Class III)
Scale Divisions:	NON-COMMERCIAL 240,000 NTEP 10,000 (Class III/IIIL) CANADA 10,000 (Class III/IIILD) OIML 10,000 (Class III)
Internal Resolution	1 part in 16,777,216
Transmission Distance	Plastic Fiber: Up to 300 feet (30 foot minimum). Glass Fiber: Up to 5,000 feet. Copper Wire: Up to 1,000 feet.



CERTIFICATIONS

The iCan Junction Box meets all requirements of Handbook 44, issued by the National Institute of Standards and Technology and has been issued the Certificate of Conformance number 03-108.



Certificate Number DK 0199-R76-03.06



AM-5574



Cardinal Scale reserves the right to improve, enhance or modify features and specifications without prior notice. SmartCal® is a registered trademark of Cardinal Scale.

Cardinal
 Cardinal Scale Manufacturing Co.
 203 E. Daugherty, Webb City, MO 64870 USA
 Pn: 417-673-4631 or 800-441-4237 • Fax: 417-673-5001
 www.CardinalScale.com

Sold By:

